

1. Please pull out CF card.



2. Please install Win CE 4.2/5.0 image into CF card, and revise file name as NK.NB0. Please put CF card into slot again.




3. Please change the NO 2 of DIP SW as "ON", then turn on AHM-6081. You will see it replace the image automatically (around 2~3 minutes). Please turn it off when you see "reboot" message.



4. Now please change No 2 of DIP SW as “ OFF”.



5. Please pull out CF card again.

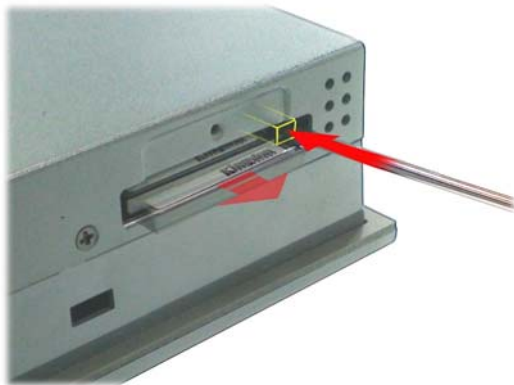

6. Please re-boot AHM-6081, then calibrate touch and revise system time.

7. How to save your calibration setting?

- a. Turn off AHM-6081
- b. Change No 4 DIP SW as “ON”
- c. Turn on AHM-6081
- d. To do Touchscreen Calibration.
- e. Change No 4 DIP SW as “OFF”.
- f. Turn off AHM-6081 to save your setting.